


Selbsttest: Prüfung des Federkontakts „f“

S 0027

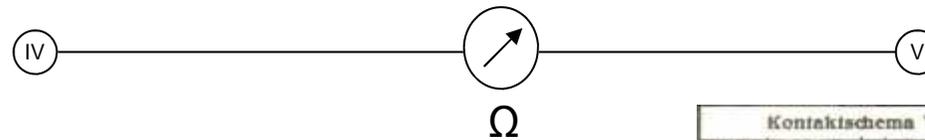

Kontaktschema W 19

	1	2	3	4	5	6	7	8	9	10	11	12	13	14
a			●	●	●	●	●	●	●	●				
b		●												
c		●												
d									●					
e												●	●	●
f												●	●	●
g									●	●	●	●	●	●
h								●	●	●	●	●	●	●
i													●	●
kc													●	●
l	●	●	●	●	●	●	●	●	●	●	●	●	●	●
m	●	●	●	●	●	●	●	●	●	●	●	●	●	●
n	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Prüfanweisung

1. Gerät vom Stromnetz trennen.
2. Keine Röhre aufstecken.
3. Prüfschalter in Stellung 11 drehen.
4. Ohmmeter zwischen die Buchsen IV und V schalten.
5. Kleinsten Messbereich wählen.
6. Das Ohmmeter muss ca. 1 Ohm anzeigen.